



THE SCOUT


N·C MADE



FURNITURE · HAND-BUILT ·

CONFIGURATIONS		WIDTH	DEPTH	HEIGHT
85010	SCOUT CHAIR	37 IN.	35 IN.	34 IN.
85020	SCOUT LOVESEAT	62 IN.	35 IN.	34 IN.
85021	SCOUT RIGHT ARM LOVESEAT	58 IN.	35 IN.	34 IN.
85022	SCOUT LEFT ARM LOVESEAT	58 IN.	35 IN.	34 IN.
85036	SCOUT RIGHT ARM SOFA	84 IN.	35 IN.	34 IN.
85037	SCOUT LEFT ARM SOFA	84 IN.	35 IN.	34 IN.
85071	SCOUT RIGHT BUMPER SOFA	84 IN.	35 IN.	34 IN.
85072	SCOUT LEFT BUMPER SOFA	84 IN.	35 IN.	34 IN.


THE SCOUT

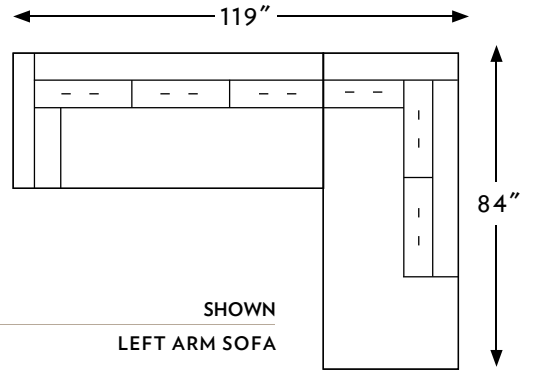


85037 LEFT ARM SOFA
85071 RIGHT ARM BUMPER SOFA

850 SCOUT


1:50 SCALE SHOWN

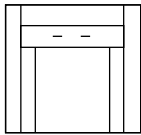


85010 SCOUT CHAIR
TOTAL W37" D35" H34"
SEAT W25" D23" H19"
ARMS --- --- H28"

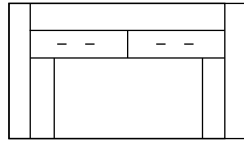


85020 SCOUT LOVESEAT
TOTAL W62" D35" H34"
SEAT W51" D23" H19"
ARMS --- --- H28"

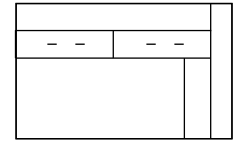


85021 RIGHT ARM LOVESEAT
TOTAL W58" D35" H34"
SEAT W52" D21" H19"
ARMS --- --- H28"

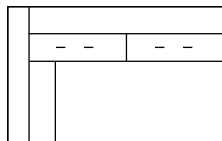


85022 LEFT ARM LOVESEAT
TOTAL W58" D35" H34"
SEAT W52" D21" H19"
ARMS --- --- H28"

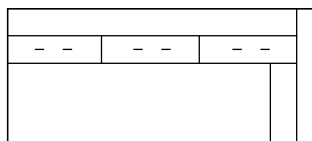


85036 RIGHT ARM SOFA
TOTAL W84" D35" H34"
SEAT W78" D21" H19"
ARMS --- --- H28"

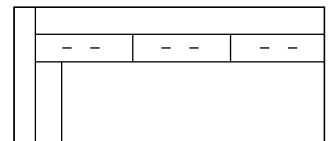

85037 LEFT ARM SOFA
TOTAL W84" D35" H34"
SEAT W78" D21" H19"
ARMS --- --- H28"



85071 RIGHT BUMPER SOFA
TOTAL W84" D35" H34"
SEAT W78" D21" H19"
ARMS --- --- H28"



85072 LEFT BUMPER SOFA
TOTAL W84" D35" H34"
SEAT W78" D21" H19"
ARMS --- --- H28"